



Getting Started

Dimmer Starter Kit Model DKIT-01



Simply Automated Pre-Configured SimplySmart™ Series

Utilizes SimplySmart™ technology to make installation a breeze.

No computer programming required!

Simple-n-easy, ready to use lighting control.





Simply Automated Pre-Configured SimplySmart™ Series

Utilizes SimplySmart™ technology to make installation a breeze. No computer programming required!
Simple-n-easy, ready to use lighting control.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic safety precautions should always be followed, including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Installation should be performed by a qualified electrician.
3. Keep away from water. If product comes into contact with water or other liquid, disconnect immediately.
4. Never use products that have been dropped or damaged.
5. Do not use this product outdoors.
6. Do not use this product for other than its intended use.
7. Do not connect multiple lamps that, when combined, exceed the maximum load rating of the product, de-rated for multi-gang boxes.
8. Do not install in areas that can exceed 120°F (e.g., in an attic).
9. To avoid the risk of overheating and possible damage to other equipment, do not use this product to control a receptacle.
10. Do not cover the product with any material when in use.
11. SAVE THESE INSTRUCTIONS.

DKIT-01 Dimmer Starter Kit

Includes 2 Standard Dimmers and 1 Deluxe Dimmer with 4-button Scene Controller

Getting Started

Section 1: Very Important Pre-Installation Notes

- Simply Automated dimmers require both a neutral (white) and hot (black) connection.
- Do not use on a 3-way circuit (intended for installation on a circuit controlled by one switch/dimmer).
- Your home should be no more than 2500 square feet and have only one breaker panel. A phase coupler is required in some home installations; especially homes > 2500 square feet or homes with more than 1 breaker panel. See Section 5 for more information.
- Not intended for use in multi-dwelling (condo, apartments) buildings with 3-phase power.
- Do not reset to factory default configuration, pre-configured settings will be lost.
- [UPStart](#) software and a [computer interface module](#) or Scheduler-Timer can be used with a PC for customizing pre-configured units and checking performance.

Section 2: Installation of the Dimmers

Find a light switch at a convenient location (i.e., master bedroom, front door or garage door entry) where you would like to use the main controller and replace this switch with the Simply Automated Deluxe Dimmer with 4-buttons. To install the dimmer please refer to the User Guide enclosed in the dimmer product box, or see US2-40 User Guide at http://simply-automated.com/documents/452-0052-0101_RevD_US2-40_UserGuide_090512.pdf

Then locate and replace two switches in your home that turn on/off the lights you would like to control with a Simply Automated Standard Dimmer (with single rocker). To install the dimmers please refer to the User Guide enclosed in the dimmer product box, or see US11-40-W User Guide at http://simply-automated.com/documents/452-0051-0101_RevD_US11-40_UserGuide_090512.pdf





All Simply Automated dimmers operate just like a regular dimmer. Test each dimmer to ensure they are properly installed. Press (tap) the top of each rocker to turn on the circuit. Press (tap) the bottom of the rocker to turn off the circuit.

The dimmers have been programmed from the factory to turn on at 100%. If you would like a different lighting level when the light is off, press and hold the top of the rocker until the desired level is achieved. If you would like a different lighting level when the light is on, press and hold the bottom of the rocker until the desired dim level is achieved, then release.

Important Note: If you are using compact florescent or non-dimmable florescent lighting, you should not attempt to change the dimming level. Most florescent lighting cannot be dimmed, can only be turned on at a 100% dim level.

Testing Deluxe Dimmer with 4-buttons:

- Button 1 turns on/off dimmer #1 (with single rocker): Press (tap) button 1 one time to turn on dimmer #1, press and hold to dim up/down, press (quickly tap) two times to turn off dimmer #1.
- Button 2 turns on/off dimmer #2 (with single rocker): Press (tap) button 2 one time to turn on dimmer #2, press and hold to dim up/down, press (quickly tap) two times to turn off dimmer #2.
- Button 3 turns on/off all 3 dimmers: Press (tap) button 3 one time to turn on all three dimmers, press and hold to dim up/down, press (quickly tap) two times to turn off all three dimmers.
- Button 4 turns off all 3 dimmers: Press (tap) button 4 one time to turn off all 3 dimmers.

Helpful Hint: Tapping should be done quickly ensuring contact is made from the button to the base sensor.

Important Note: Each dimmer has a unique ID number. You can find the ID number on the front of each dimmer. The single rocker dimmers for the Dimmer Starter Kit (DKIT-01) have ID #1 and #2. The Deluxe Dimmer with 4-buttons has ID #3. This is important information to note as it relates to operation with the Scheduler-Timer accessory (sold separately).

Section 3: Editing Buttons (Scenes) on the Deluxe Dimmer with 4-Buttons

Each button on the Deluxe Dimmer with 4-Buttons controls a SCENE that can easily be edited from the factory pre-sets. Button 1 turns on/off dimmer #1, button 2 turns on/off dimmer #2, button 3 turns all three dimmers on/off, button 4 turns all three dimmers off. You can change the dimming level or number of dimmers controlled by each button to create your own custom scenes!

Section 3.a. Changing the Dimming Level

Important Note: If you are using compact florescent or non-dimmable florescent lighting, you should not attempt to change the dimming level. Most florescent lighting can only be turned on at a 100% dim level.

Button 1. Button 1 is programmed from the factory to turn on dimmer #1 at a 100% dim level. To change the dimming level:

- Go to the Deluxe Dimmer with 4-buttons, press button 1 one time to activate the devices in the scene. If any other devices were previously set to be controlled by button 1, check to make sure they are ON.
- Go to dimmer #1, press and hold the top rocker to the desired dimming level.
- Go to the Deluxe Dimmer with 4-buttons, press (quickly tap) button 1 seven times. You have created a new scene by re-programming button 1 from the pre-configured dimming level.



Button 2. Button 2 is programmed from the factory to turn on dimmer #2 at a 100% dim level. To change the dim level of dimmer #2, follow the instructions outlined above in Section 3.a. noting you will need to press (tap) button 2 seven times to program the new scene.

Helpful Hint: If you press (tap) a button and the dimming level does not change, repeat the two steps outlined above. Tapping should be done quickly ensuring contact is made from the button to the base sensor.

Buttons 3 and 4. Button 3 is programmed from the factory to turn on all three dimmers at a 100% dim level. Button 4 is programmed from the factory to turn off all three dimmers. **We do not recommend editing buttons 3 or 4 since the circuit controlled by the Deluxe Dimmer cannot be edited.** To edit these buttons and how they control the level of the Deluxe Dimmer, a computer interface module (or scheduler-timer) and UPStart software is required.

See Manual Scene Creation and Modification section in the US2-40 User Guide http://simply-automated.com/documents/452-0052-0101_RevD_US2-40_UserGuide_090512.pdf for more details.

All accessory devices (up to ten or more dimmers/modules) in the Pre-Configured SimplySmart™ Series have the same settings -- one tap of button 3 turns all devices on, one tap of button 4 turns all devices off. This pre-programming is a very powerful and convenient feature using both the Deluxe Dimmer with 4-buttons and Tabletop Controller with 4-buttons. For example, using the Deluxe Dimmer for entering a home (button 3 for ALL ON), leaving a home (button 4 for ALL OFF), or using the Tabletop Controller at your bedside side table for security and nighttime convenience (button 3 for ALL ON or button 4 for ALL OFF).

Important Note: If you program a dimmer for a dimmable (incandescent or halogen) light bulb and later change to a compact florescent bulb that cannot be dimmed, go to the dimmer, press and continue to hold the top rocker until the compact florescent light reaches its brightest level, approximately 10 seconds. Go back to the Deluxe Dimmer, press the button you wish to re-program seven times.

Section 3.b. Adding a Dimmer

Button 1. Button 1 is pre-programmed from the factory to turn on/off dimmer #1. To add dimmer #2 (or accessory devices) to button 1:

- Go to the Deluxe Dimmer with 4-buttons, press button 1 one time to activate the devices in the scene. If any other devices were previously set to be controlled by button 1, check to make sure they are ON.
- Go to the dimmer #2, press and hold the top rocker to the desired dimming level. Then press (quickly tap) the top rocker 5 times to place in the program mode. A green light will flash above the rocker to confirm the dimmer is in the program mode.
- Go to the Deluxe Dimmer with 4-buttons, press (quickly tap) button 1 seven times. Button 1 will now turn on/off both dimmer #1 and dimmer #2. Press (tap) button 1 one time to turn on both dimmers, press (quickly tap) two times to turn off both dimmers. You have created a new scene!

Button 2. Button 2 is pre-programmed from the factory to turn on/off dimmer #2. To add dimmer #1 (or accessory devices) to button 2 follow the instructions outlined above in Section 3.b. noting you will need to press (tap) button 2 seven times to program the new scene.

Helpful Hint: After tapping five times, dimmer will stay in the program mode for approximately 5 minutes. You can always confirm if the dimmer is in the program mode by checking for a blinking green light above the rocker. If the dimmer is not flashing green, to place in the program mode, quickly tap the top rocker five times. To exit the program mode, quickly tap the top rocker two times.

Section 3.c. Adding or Editing Multiple Dimmers at the Same Time

You can add or edit dimmers with custom dimming levels to each button at the same time. To add or edit the dimming level of dimmers #1 and #2 to buttons 1 or 2.

Button 1.

- Go to the Deluxe Dimmer with 4-buttons, press button 1 one time to activate the devices in the scene. If any other devices were previously set to be controlled by button 1, check to make sure they are ON.
- Go to dimmer #1 and #2, press and hold the top rocker to the desired dimming level. Then press (quickly tap) the top rocker of each dimmer 5 times to place in the program mode. A green light will flash above each rocker to confirm the dimmer is in the program mode.
- Go to the Deluxe Dimmer with 4-buttons, press (quickly tap) button 1 seven times. Button 1 will now turn on/off dimmers #1 and #2 to the dimming levels you selected. Press (tap) button 1 one time to turn on dimmers, press (quickly tap) two times to turn off dimmers. You have created a new scene!

Button 2. Follow the instructions outlined in Section 3.c. for Button 1, noting you will need to press (quickly tap) button 2 seven times to program the new scene.

Buttons 3 and 4. Button 3 is programmed from the factory to turn on all three dimmers at a 100% dim level. Button 4 is programmed from the factory to turn off all three dimmers. **We do not recommend editing buttons 3 or 4 since the circuit controlled by the Deluxe Dimmer cannot be edited.** To edit these buttons and how they control the level of the Deluxe Dimmer, a computer interface module (or scheduler-timer) and UPStart software is required.

Helpful Hint: Before adding or editing a scene, be sure to first activate the scene (i.e. press the button of the scene to be edited) so all the dimmers are at their set level before making additions or adjustments. If a dimmer is in the scene and is not ON (i.e. 0% dim) that level will be saved when the button is tapped 7 times.

Helpful Hint: If you press (tap) a button and one of the dimmers you added does not turn on, repeat the steps outlined above. Tapping should be done quickly ensuring contact is made from the button to the base sensor.

Helpful Hint: After tapping five times, dimmer will stay in the program mode for approximately 5 minutes. You can always confirm if the dimmer is in the program mode by checking for a blinking green light above the rocker. If the dimmer is not flashing green, to place in the program mode, quickly tap the top rocker five times. To exit the program mode, quickly tap the top rocker two times.

Section 3.d. Deleting a Dimmer.

If you would like to edit a scene and delete a dimmer from any button:

- Go to the dimmer you would like to delete, press (quickly tap) the top rocker 5 times to place in the program mode. A green light will flash above the rocker to confirm the dimmer is in the program mode.
- Go to the Deluxe Dimmer with 4-buttons, press (quickly tap) the button you would like to edit (delete the dimmer from) eight times.

Helpful Hint: Multiple Dimmers can be deleted (or added) in a scene at the same time. Each dimmer to be deleted must be in the program mode when the button to be edited is tapped eight times. Or, each dimmer to be added must be in the program mode when the button to be edited is tapped seven times.

Helpful Hint: Five taps on the top rocker puts a dimmer in program mode, seven taps on a button adds a dimmer to a button, eight taps on a button deletes a dimmer from a button. To exit the program mode, quickly tap the top rocker two times.

Section 4: Simple-n-Easy Expansion for SimplySmart™ Series. Fully Compatible. All Starter Kits and Accessories -- Dimmers, Tabletop Controllers, Controlled Receptacles, Lamp, Appliance and Fixture Modules, plus Scheduler-Timer.

Simply Automated Pre-Configured SimplySmart™ Series offers simple-n-easy expansion capability. Begin with the Dimmer or Lamp Starter Kit, add other starter kits, additional standard dimmers, additional Deluxe Dimmers with 4-buttons, additional modules, Tabletop Controllers with 4 or 8-buttons or any of the other pre-configured kits or accessories. All the pre-configured kits and accessories can be edited and added to scenes as previously described – only limitation being not more than one of each model number or kit number per installation. One touch button convenience to turn ON/OFF up to ten or more Simply Automated devices – custom scenes you create!

Lamp Starter Kit

Includes 2 lamp modules and tabletop scene controller with 4-buttons (model: DKIT-02)



Landscape Relay

Starter Kit Includes 2 appliance relay modules and scheduler-timer (model: DKIT-05)



Landscape Dimmer

Starter Kit Includes 2 standard standard dimmers and scheduler-timer (model: DKIT-06)



Lamp (Dimmer) Modules



UML7

UML8

Appliance (Relay) Modules



UMA25

UMA26

Dimmers



US1W9

US1W10

Tabletop Controllers

(with 4 or 8 -button scene control)



US2TP11 USQT22 US28OTP23

Controlled Receptacles

(top outlet controlled, bottom outlet always on)



URD27 URD28

Deluxe Dimmer

(with 4-button scene control)



US2W12 US2W24

Important Note: only one of each pre-configured accessory model number can be ordered per home installation.

Add a Scheduler-Timer (model: [UCS-01](#)) to automatically or manually turn ON/OFF indoor or outdoor security lighting. Or to create night time convenience pathway lighting. Energy savings dimming feature (from 10%, 20%, 30%, 40%, to 90% dimming levels). Random 'vacation mode' setting gives a home the 'lived in' look. Built-in celestial clock computes sunrise and sunset. Calculates daylight savings time and leap years.

The Scheduler-Timer is easily and quickly programmed -- no PC connection is necessary. Just set the time, your location (using your zip code), the Network ID # (250), and you're ready to input on/off/dim events using the ID # for each dimmer (each dimmer has a unique ID number). You can find the ID number on the front of each dimmer or the back of each module. For the Dimmer Starter Kit (DKIT-01), the single rocker dimmers have ID #1 and #2; the Deluxe Dimmer with 4-buttons has ID #3.



Section 5: In Case of a Problem

Phone: 760-431-2100 Ext. 138 Monday-Friday 8AM-5PM (Pacific Time) for assistance, or write to Support@Simply-Automated.com.

Phase Coupler: Your home should be no more than 2500 square feet and have only one breaker panel. A phase coupler is required in some home installations; especially homes > 2500 square feet or homes with more than 1 breaker panel. If you have tested the rockers for each dimmer, they work, but the buttons do not turn on all three dimmers, the circuits in your home may need phase coupling or phase alignment. All homes have a 240V feed to the main panel box, where the 240V is separated into 120V in two phases, an A and B. You will need to install a phase coupler, or use devices on one phase (align or move lighting circuits, at the breaker, that have these dimmers and modules to either phase A or B, not both) see http://www.simply-automated.com/products/cats/phase_couplers.php for options.

Model #	Description
ZPCI-P30A	Plug-In Inverting Phase Coupler, fits a standard (NEMA 10-30) 240VAC clothes dryer outlet
ZPCI-P50A	Plug-In Inverting Phase Coupler, fits a standard (NEMA 10-50) 240VAC / 50Amp clothes dryer outlet
ZPCI-W	Wire-in Inverting Phase Coupler
ZPCI-B	Breaker Panel Inverting Phase Coupler

Installation Wiring Connection: The Pre-Configured SimplySmart™ Series requires both a hot (black) and neutral (white) wire for installation. If the switch you plan to replace has only one hot wire (no neutral), you will need to utilize a Fixture Dimming Module (model: UFD-30) from Simply Automated Custom Expansion Series, using UPStart software, a PC and Computer Interface Module (model: UMC-USB). See Section 6.

3-Way or 4-Way Circuits: The dimmers for the Pre-Configured SimplySmart™ Series are intended for installation on a circuit controlled by one switch/dimmer. If you would like to install dimmers on a 3 or 4-way circuit, you will need to use one or more Dedicated Remote Switches (model: USR1-40A-W) or US1/US2 switches configured with UPStart software, a PC and Computer Interface Module (model: UMC-USB). See Section 6.

Network ID #: The default Network ID # setting for the Pre-Configured Series is **250**. This information is needed when using the Scheduler-Timer.

Section 6: Simply Automated Custom Expansion Series

Powerful Custom Expansion Capability – up to 250 devices – using your PC and UPStart software! Devices include single rocker dimmers, deluxe dimmers with different faceplates (up to 8 buttons), lamp or appliance modules, tabletop pedestal with 8 buttons, wall receptacle, fixture relay, fixture dimmer or scheduler-timer. Control lighting and 120VAC appliances, heaters, fans, motors or pumps. Programmable dimming rates (1 second, 5 second, up to 4 hours). Energy saving countdown timer function. Lighting control for your entire home! Visit <http://www.simply-automated.com/products/products.php>

